


# EC 100 NC SS-1166

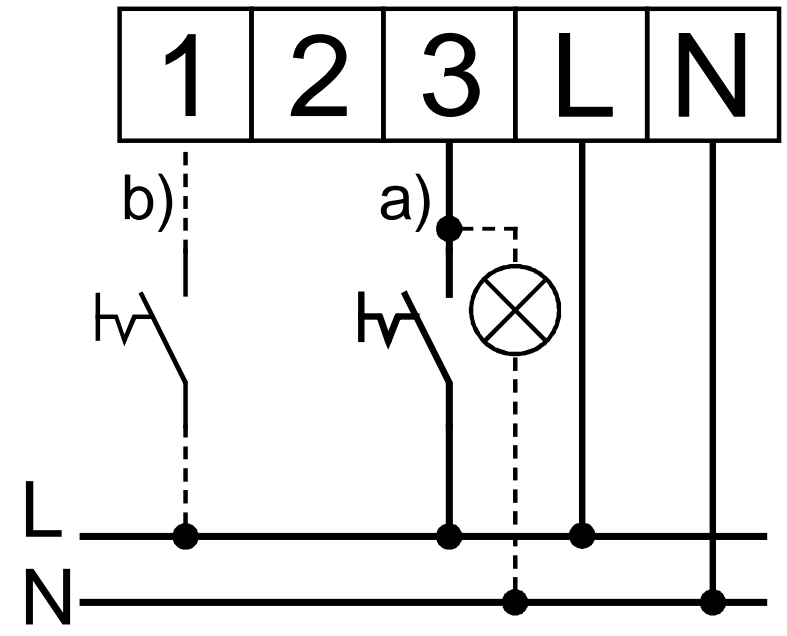

3	100 m <sup>3</sup> /h		
1			

- a) manuell Ein
  - b) Automatik deaktivieren
- 

- a) ON manually
  - b) deactivate automatic
- 

- a) Mode manuel forcé
- b) Désactivation du mode automatique