


EC 100 F SS-1172

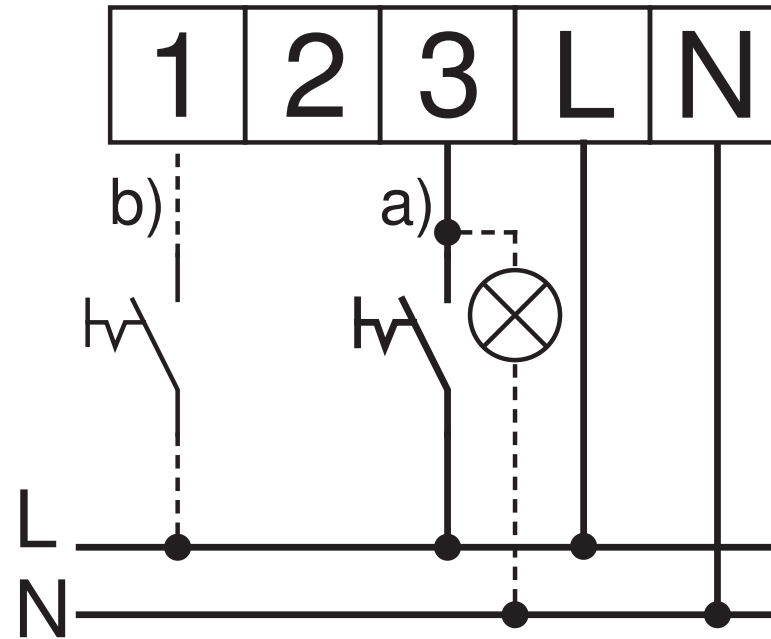

**3** 100 m<sup>3</sup>/h  

a) manuell Ein  
b) Automatik deaktivieren

a) ON manually  
b) deactivate automatic

a) Mode manuel forcé  
b) Désactivation du  
mode automatique